Mower Blade Sharpening

Version	Description	Last Edited By	Date
0.0	Initial Instructions	ОК	8/3/22

Use Protective Gear

- Eye Protection
- Ear Protection
- Gloves

• All can be found in field kit

Don't Remove Blade

• Blade should remain on mower through this process

Install Disk Guard On Angle Grinder




Install ¼" Thick Disk



Move to Power Source

 Park LCR next to power source where you can plug angle grinder into outlet

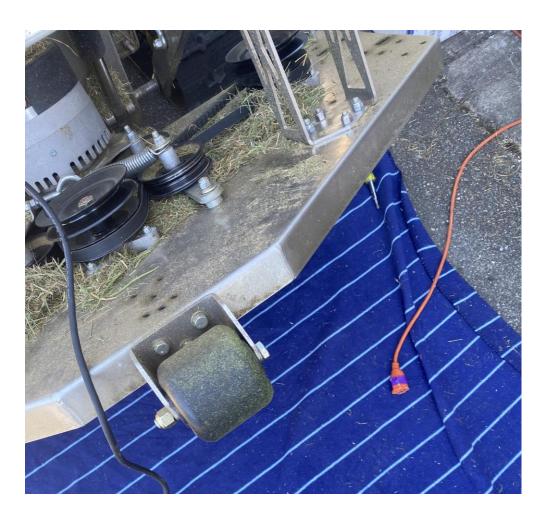

Sharpen Blades

• Disk face up, use angle grinder to sharpen top and bottom of blade





Clean Spindles

• Pull off grass tangled around spindle base





Done